LOCKER LOCK USER MANUAL

MODEL: MI-1200






⚠ Caution!

As this is a keyless digital locker, damage may occur to parts of the locker lock system, it is not used according to the manual.

Users should be fully aware of the manual and how to operate this product.

- * This manual may change without notice in case of product improvement.
- * Product specifications are subject to change without prior notice.
- * This manual may not be edited or changed without the manufacturers prior permission.



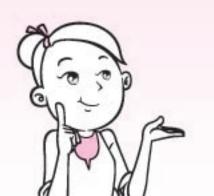



Product Compositions



Number	Description				
1	Front Ass'y				
2	Mounting Plate				
3	Strike				
4	Back Ass'y				
(5)	Screw(M5x20) to Fasten Front Ass'y(2ea)				
6	Screw(4x20) to Fasten Mounting Plate(2ea)				
7	Screw(4x20) to Fasten Strike(2ea)				
8	Screw(4x20) to Fasten Back Ass'y(4ea)				
9	Battery ("AA", "LR6") 3ea				

Product Specifications

Description		MI-1200			
	Front Ass'y	100.5(H) x 60(W) x 18(D)mm / Weight 105g			
Dimension	Back Ass'y	130(H) x 66(W) x 26(D)mm / Weight 120g			
	Strike	70(H) x 25.3(W) x 14(D)mm / Weight 70g			
Material	Front Cabinet	ABS			
	Back Cabinet	ABS			
	10key Button	Acrylic			
	Battery Cover	ABS			
	Strike	Aluminium Alloy			
Backset					
Finished		Metallic Coating Spray			
Color		Silver			
Door Thickness		12mm ~ 20mm			
Door Handing		LH / RH			
Power Supply		6Volts(Alkaline Battery): 1.5Volts("AA" LR6") x 3ea			
External Power Supply		9Volts(6LF22) Alkaline			
Battery Life Span		Approx. 10 ~ 12month (In case of 30times to use a day)			

he battery life span is based on Milre's in-house tests and can differ depending on the usage condition or nvironment.

or improved performance, some specifications and designs of this product are subject to change without

Factory Mode: 93

Locking code from factory: 0000 (How to open: press "★"→ press 0000 → press "★") Master code from factory: 5678

* Mode Specifications

		Specifications						
Mode	Mode	Secret	Diogital	Auto/Manual	Master Code/	Domonis		
	No.	Code	Key	Locking	Master Digital Key	Remark		
	91	0	X	X	0	4 digits		
	92	0	0	X	0	4 digits, D/key		
	93	0	X	X	0	4 ~ 12 digits		
Temporary	94	X	0	X	0	D/key		
	95	0	0	X	0	4 ~ 12 digits, D/key		
	96	0	X	0	0	4 ~ 12 digits		
	97	X	0	0	0	D/key(up to 15 keys)		
Personal	98	0	0	0	0	4 ~ 12 digits, D/key (up to 15keys)		
	99	X	X	0	0	Master Code only		
			0: Function	X: No Fu	nction			


Temporary mode: 91 to 95

Personal mode: 96 to 99.

The way to use belong to mode no. Mode No 91 and 92: 4 digits only

Mode No 93, 95, 96, 98: 4 ~ 12dígits with press "★"

How To Select Mode: (In case of mode no. 93)

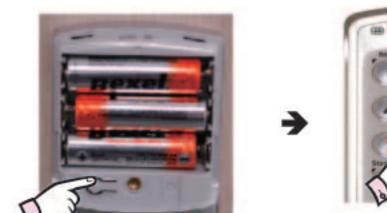

Press "RES" Button at the back ass'y for



Press master code Factory setting



Press" # button Press mode no. "93"

Innovation of Digital Product

www.milre.com

When you change the mode, all the data to be deleted which are secret code, digital key and auto locking. Therefore you should register again secret code or digital key with choice auto locking or not. But master code and master digital key are maintained as before.

■ TEMPORARY MODE (91 TO 95)

How To Use Temporary Mode (In this mode can use secret code and digital key without registration)

1. How to lock 91 and 92



Just press any 4digits (Ex: locked code 1234)

2. How to lock 93 and 95









3. How to open 91 and 92



Personal Mode

5. How to open with secret code (96 and 98 only)



Press 123456

Press "*"

(Ex: Registered123456)

6. How to open with digital key (Mode 97 and 98 only)



Touch the digital key at the touch plate

7. How to choice Manual/Automatic locking mode









to automatic


8. How to release or block secret code (91 to 98 only)









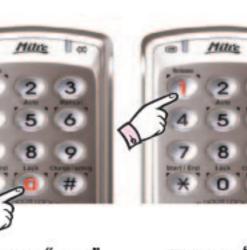

www.milre.com

■ Master code or Master digital key

1. How to change master code

Press new

master code







Press new master

code again

2. How to register a master digital key




Touch the D/key at the touch plate Press "#" for 3seconds Press master code

2-1. How to register several master digital key (up to 3keys)

Press "#" button for 3 seconds → Press master code → Touch master key → After sound of "Birik Birik" → Touch additional digital key successively (Max. 3EA is available) → Press (#) to end

3. How to change a master code with master digital key

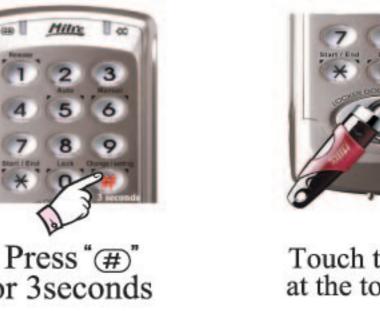

Touch the D/key at the touch plate





Special Warning: Never forget the master code, you can not use the product properly if you forget the master code.

Temporary Mode




Press "X"



Press 123456 (Ex: locked code 123456)

5. How to use digital key (92, 94 and 95 only)

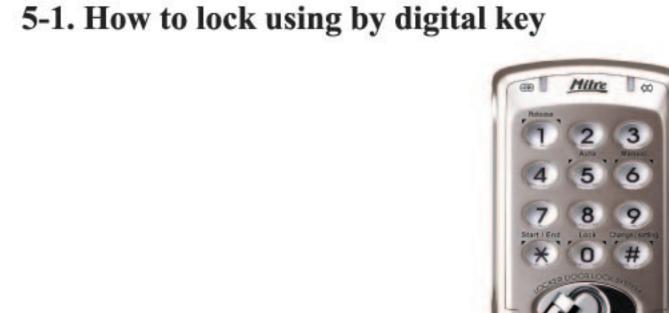



Touch the digital key at the touch plate of the product → lock the product

5-2. How to open using by digital key



Touch the digital key(which is last used one to lock the product) at the touch plate → unlock the product

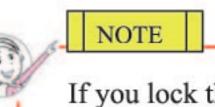

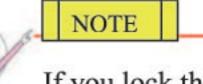

If you lock the product by secret code, then you can only unlock the product by secret code, also if you lock the product by digital key, then you can only unlock the product by digital key. But the master code or master digital key can use all the time.

PERSONAL MODE (96 TO 99)

How to use Personal Mode

Hille

Milre systek Co.,Ltd.

(In this mode can use secret code and digital key with registration)



Press "RES" Button







HILL W

Personal Mode

Press "X"

2-1. How to register several digital key (up to 15 keys)

Press "RES" button → Touch the digital key at the touch plate → You can touch other digital key after you hear beep sound "biri" and then you can follow this process up to 15 times, after that when you have done last digital key with last beep sound "biri" then press "* "button to end.

Touch the digital key

at the touch plate

3. How to delete digital key



Press "RES" Button



4. How to lock the door by manual (96 to 99): In case of the locking mode in manual



Master code Master digital key

Touch new master digital key

at the touch plate

for 3seconds

MILE TO

Press "#" for 3seconds

5-2. How to delete master code

5-1. How to delete master digital key









to end

5. How to delete master code and master digital key

Touch the master D/key at the touch plate



Press master code

Because if you change or added master key, then the former master digital key is erased automatically.


Miles 0

Press "#" for 3seconds to end

Miles I as

Press "#" for 3seconds to end

If you change or added master digital key, then you should register againwhich are former digital key all,

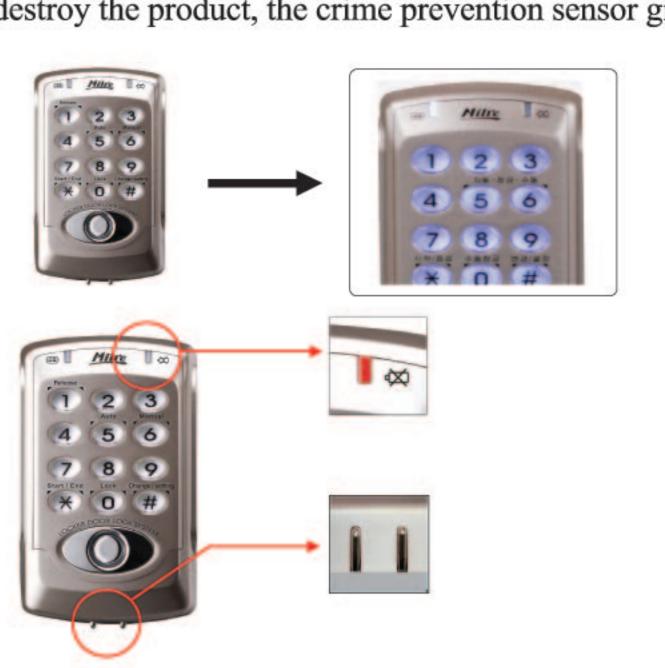

Touch master

Press"(#)"

Press "#"



Press "#"







Press 4"
for mute

Other's functions

If wrong cods are 5 times in raw, the keypad becomes inactiv for a full minute with a warning alarm.

If trespassers try to open the product by force or destroy the product, the crime prevention sensor gives

Visible 10key buttons at night with back-light. Press "X" or "#, then back-light is turned on. 6. Low battery warning

5. Digital panel light

when you operate The product. 7. External power Supplier





Press "5"





Press (1

Innovation of Digital Product

Hille Milre systek Co.,Ltd.

■ MUTE function

Press "(#)

1. In temporary mode

2. In personal mode

Others



Press 4



Press "#" Press secret code Touch the D/key

1. Operation signal function Temporary mode - Blue light flashing. Personal Mode - Blue light on

3. Prevention against open with wrong code

a loud warning sound for your attention.

When the battery has been low voltage,








Press Secret code or Touch the D/key

Press "6" to manual








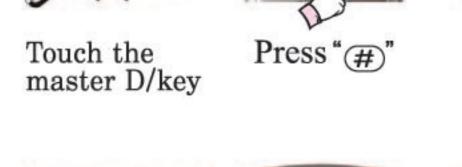



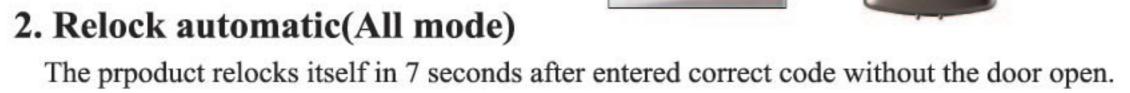

4. Intrusion warning function

the product will give you warning alarm

If the battery has been discharged completely, then you can supplyexternal power by the battery (6LF22. 9V)